



PROCARPET ALL

NATURAL AND ANODIZED SILVER ALUMINIUM

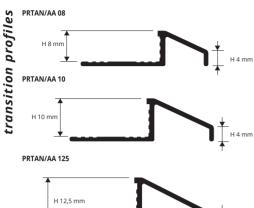



EXAMPLES OF LAYING





NATURAL ALUMINIUM thermo packed 5 Pcs

Dar length 2,70 im - pack. 20 PCS - 54 im			
Article	Hmm		
PRTAN 08	8		
PRTAN 10	10		
PRTAN 125	12,5		

INSTRUCTIONS FOR LAYING 1. Choose the "PROCARPET ALL" taking into consideration the exact height of the floor. 2. Using a notched spreader apply the adhesive onto the area of application of the profile. 3. Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. 4. Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. 5. Fill the profile/tile area of context the adhesive to percent the accumulation of wrater in of contact with adhesive to prevent the accumulation of water in any voids.



ANODIZED SILVER ALUMINIUM thermo packed ar length 2 70 lm - nack 20 Pcs - 54 lm

Dai lengui 2,70 mi - pack. 20 FCS - 34 mi			
Article	Hmm		
PRTAA 08	8		
PRTAA 10	10		
PRTAA 125	12,5		

AA - Anodized silver alum.

COLOURS

AN - Natural alum.

PROCARPET ALL is a profile in aluminium (natural or silver anodized) used for joining two floors of differing thickness and in particular for joining a tiled or parquet floor to wall-to-wall carpeting, making a perfect join thanks to the vertical part of less than 4 mm. In addition to completely protecting the edge of the higher floor, this


particularly sturdy profile withstands high loads and supports the frequent passage of manual trolleys, vehicles and intense pedestrian traffic.

PROSKID is a sloping profile ideal for the stepless joining of two existing floors of differing heights where no transition profile was installed at the time of laying. Silicone is used for the laying. The notching on the profile helps anchorage of the silicone or adhesive. Hardwearing and attractive.


POLISHED BRASS AND ANODIZED SILVER ALUMINIUM

PROSKID

PSLDOL 10/10A/109/109A/109AS

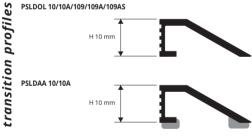

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose the "PROCARPET" taking into consideration the exact 1. Choose the "PROCARPE I" taking into consideration the exact height of the floor. 2. Using a notched spreader apply the adhesive onto the area of application of the profile. 3. Lay and align the profile, cut to the necessary length, pressing the perforted flange into the adhesive. A Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. 5. Fill the profile/lie area of contact with adhesive to prevent the accumulation of water in any voids.



POLISHED BRASS thermo pack bar length 2,70 lm - pack. 20 Pcs				
Article	Hmm			
PSLDOL 10	10			*
PSLDOL 10A (adhesive)	10			*
POLISHED BRASS thermo pack bar length 0,90 lm - pack. 20 Pcs		F	SELF PACK	
Article	Hmm			
PSLDOL 109AS (adhesive)	10	/		_
POLISHED BRASS thermo pack bar length 0,90 lm - pack. 20 Pcs		-	ECO BLISTER	
Article	Hmm			
PSLDOL 109	10	/		
PSLDOL 109A (adhesive)	10	/		



ANODIZED SILVER ALUMINIUM thermo packed bar length 2,70 lm - pack. 20 Pcs - 54 lm

Article	Hmm	
PSLDAA 10	10	
PSLDAA 10A (adhesive)	10	

COLOURS

OL - Polished brass	AA - Anodized silver alum.

ROGRESS \Box FILES